


To replace fuses in the fuse box (4), remove the fuse box cover.

The spare fuses (5) are located in the fuse box.

Pull the old fuse out of the clips. Push a new fuse into the clips and install the fuse box cover.

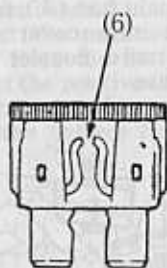

(6) Blown fuse

#### ▲WARNING

\* Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire may result, causing a dangerous loss of lights or engine power.

## CLEANING

Clean your motorcycle regularly to protect the surface finishes and inspect for damage, wear and oil, coolant or hydraulic fluid leakage.

#### CAUTION

\* Avoid spraying high pressure water (typical in coin-operated car washes) at the following areas:

Wheel Hubs  
Ignition Switch  
Carburetors  
Brake Master Cylinder  
Instruments  
Handlebar  
Muffler Outlets  
Switches  
Under Fuel Tank  
Drive Chain  
Under Seat

1. After cleaning, rinse the motorcycle thoroughly with plenty of clean water. Strong detergent residue can corrode alloy parts.
2. Dry the motorcycle, start the engine and let it run for several minutes.

3. Test the brakes before riding the motorcycle. Several applications may be necessary to restore normal braking performance.

4. Lubricate the drive chain immediately after washing the motorcycle.

#### ▲WARNING

\* Braking efficiency may be temporarily impaired immediately after washing the motorcycle. Anticipate longer stopping distance to avoid a possible accident.

#### CAUTION:

\* Do not use steel wool or a cleaner containing abrasives or compounds to clean the wheels, as they can cause damage.